



MANUAL FOR CONTROLLING THE TV WITH THE REMOTE CONTROL

Switch TV on/off	red button in the top right corner of the remote control
Program selection	buttons with numbers 1 to 0 and buttons with symbols „Δ“ and „▽“
Volume adjustment	buttons +/-

Instructions for switching the TV from radio to TV programmes

If the TV is switched in radio mode and you want to select TV broadcasting, press the „TV-G“ button on the TV remote control. The split screen will pop up a table with a list of programmes. Then press the red button at the bottom of the TV remote. At the bottom of the screen, you will see a red symbol that reads „radio“, which changes to „DTV“ when you press the red button. Confirm this by pressing the middle button between the volume control buttons and a picture will pop up. Press the „TV-G“ button again and the table will disappear from the screen.

The second way to switch the radio to TV is by pressing button #1 on the TV remote. Then press the button with the „down arrow“ symbol to switch the program back. Then the last channel of the TV programme series will pop up on the screen and you can select the programmes of your choice by pressing the number buttons (button No. 1 = CT 1 etc.). This same procedure applies for switching TV programmes to radio programmes. Pressing the „TV-G“ button again will make the table disappear from the screen.

Instructions for switching the TV to DTV - digital TV mode from blue screen mode

If the blue screen is on when the TV is switched on, press the „AV“ button, a selection table with DTV, ATV, etc. will pop up. Then press the „ up arrow „ button on the remote control repeatedly to reach the first row of the table to the „ DTV „ entry. Confirm this by pressing the middle button between the volume control buttons and the previously selected TV programme will appear.